

reelMaster LA



Parts list
Easy care instructions
Changing direction
of retrieve

GUIDELINE 

reelMaster LA

How to change the direction of retrieve

1. Remove spool from reel by unscrewing the release spool cap. (35)
2. Pull the spool off the shaft.
3. Remove the E-clip from the main shaft. (27)
Then pull off the two thin metal washers.
4. Carefully remove the hexagonal screw (1) in the centre of the drag knob. Pay special attention to the spring and click pin attached underneath.
5. Remove the click pin and the spring (4-5) from the hole.
6. Remove the 3 Phillips head screws. (6)
7. Lift off the black housing plate. (7)
8. Lift out the stainless drag plate (10).
9. Remove the rubber o-ring and all washers, (10-15)
The one-way bearing is now exposed. Lift it out, turn it around and replace it, making sure it is fitted correctly into the remaining washers and the three slots in the cylinder walls.
10. Replace the washers you removed, making sure they are in the same order as before. Failure to do so may cause malfunction to the reel.
11. Replace the stainless and the Acetal cover plates. Make sure the click pin and spring are fitted correctly.
12. When attaching the drag setting knob, make sure the numbers are set so the 6 is in the free spool position. Fasten the centre hexagonal screw.
13. Replace washers and E-clip on the main shaft.
14. Fit the spool in place, making sure the straight edges are aligned on spool and shaft.

Thank you for choosing a Guideline Fly Reel.

GUIDELINE fly reels come with a 3-year full service warranty against manufacturer's defects in material or workmanship. This guarantee is valid for the first owner only. The warranty is limited to the repair or exchange of the product and does not cover any type of damage caused by neglect, normal wear or misuse.

